



adarak.com)

- Adhere to safety warnings and cautions outlined in ADARAC™ Installation Instructions (available at adarak.com)
- Always use caution when loading or unloading cargo securely before loading cargo or operating truck
- Verify ADARAC™ and Load Dividers are mounted
- Always distribute weight evenly

SAFETY INFORMATION


▲WARNING: Each Load Divider has a maximum load capacity of 100 lbs. DO NOT EXCEED this capacity.

TOOLS: Protective eyewear, ratchet and 9/16" socket

channels

REQUIREMENT: ADARAC™ Cross Bars with mounting

LOAD DIVIDER INSTALLATIONS

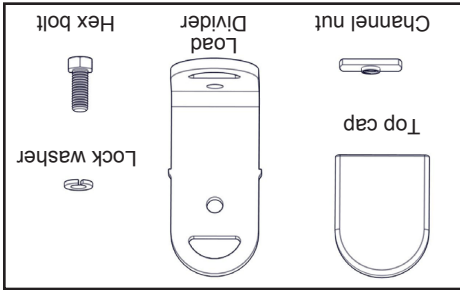

CONTENTS: (4) Load Dividers, (4) Channel nuts, (4) 3/8" x 1" Hex bolts, (4) Top caps and (4) Lock washers



LOAD DIVIDER KIT | SET OF FOUR

- Quickly and easily secure cargo
- Freely reposition along cross bar
- Simple installation

Reorder #4001551

LOAD DIVIDER INSTALLATION

A. Under cross bar, tilt channel nut into mounting channel with extended thread facing up.

NOTE: It is not required to remove cross bars from uprights when inserting channel nuts.

B. With Load Divider in desired orientation, align mounting hole with channel nut.

C. Insert bolt with lock washer and finger tighten.

D. Place top cap on free end of Load Divider.

E. Fully tighten and secure all Load Divider bolts.

IMPORTANT: Verify Load Dividers are mounted securely before loading cargo or operating truck.

