



EMERGENCY REPAIR KIT


- Fast-setting, strong adhesive
- Flexible down to -30°F
- Works on vinyl, rubber, plastic, wood and metal



INSTRUCTIONS

NOTE: For best adhesion, ensure air and surface temperatures are above 60° F or use heat supply to warm applicable area.

A. Trim patch with at least 1" of extra coverage around tear.

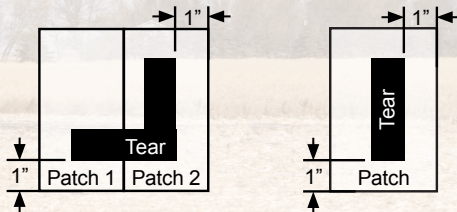

B. Clean area well, then prep with rubbing alcohol and let dry.

C. Remove backing, press firmly and smooth out toward edges while applying patch. Ensure to seal all edges.

TIP: Use backing support to create flat surface.

D. Repeat on opposite side of tarp for stronger patch.

NOTE: Longer cure time provides a stronger bond.