

QUICK RELEASE END CAP BRACKET INSTRUCTIONS

Use these instructions to install quick release end cap brackets. Read and follow these instructions along with the standard instructions carefully before installing or using tarp system.

NOTICE TO INSTALLER: Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. If you have questions or problems, call customer service. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these instructions for future reference.

PREPARATION

COMPONENTS

- (2) Bracket assemblies with hardware
- Angle bracket with hardware

TOOLS NEEDED

- Drill with 5/16" bit
- 9/16" and 1/2" Sockets
- 9/16" and 1/2" Wrenches


NOTE: Always mark and drill through center of slotted holes to allow for adjustment.

1: ATTACH FACE OF END CAP

To attach face of end cap to box, perform one of the following:


SIDE MOUNT END CAP

- Place angle bracket with slotted holes on top of box, centered from side to side with vertical edge even with box.
- Use slotted holes in angle bracket as template to mark and drill (2) 5/16" holes into box, then secure with (2) 3/8" x 1" self-threading bolts.
- Set end cap on box and center.
- Drill (4) 5/16" evenly spaced holes through angle bracket and front of end cap then secure with (4) 3/8" x 1" self-threading bolts.

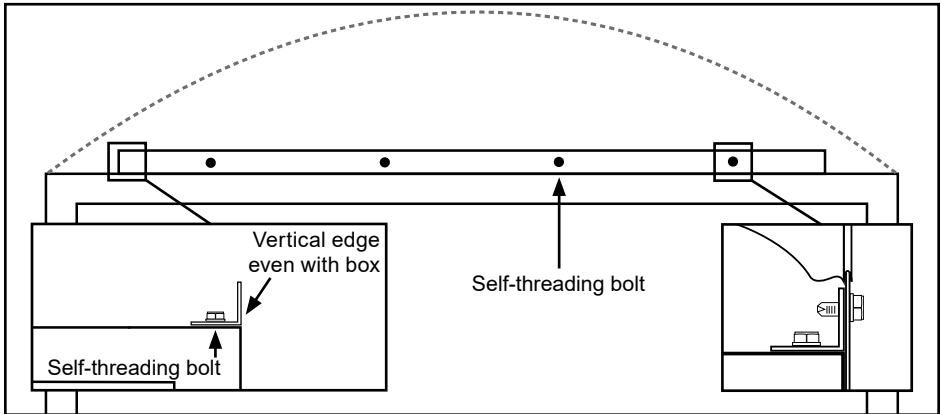

TOP MOUNT END CAP

- Set end cap on box and center, allowing face of end cap to overhang edge 1/4".
- Use slotted holes in end cap as template to mark and drill (2) 5/16" holes into box, then secure with (2) 3/8" x 1" self-threading bolts.

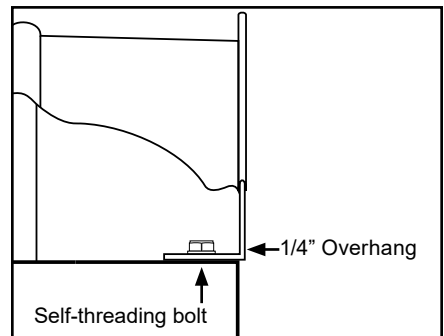

2: ATTACH BRACKET

A. Tilt inside edge of end cap up $1/4$ ".

B. Place bracket against inside of box under end cap with slotted holes on each side of sealing rib and clamp to box.


C. Use holes in lower part of bracket to mark and drill (2) $5/16$ " holes through box, then secure with (2) $3/8$ " x 1" self-threading bolts.

NOTE: Ensure inside edge of end cap is tilted up $1/4$ ".

D. Use center of slotted holes in bracket to mark and drill (2) $5/16$ " holes through end cap on each side of sealing rib, then secure with (2) $5/16$ " x 1" bolts, flat washers, lock washers and nuts.

E. Repeat Step 2 for bracket assembly on opposite side of end cap.

F. Repeat Steps 1 and 2 for other end cap.

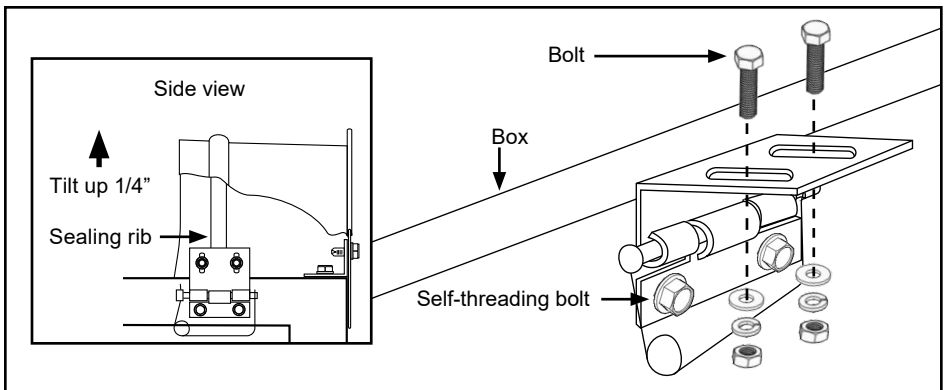

3: REMOVING END CAP

A. Loosen and remove ridge strap.

B. Loosen (2) $3/8$ " x 1" self-threading bolts through box rail just enough to allow end cap to slide out.

C. Unhook (2) bracket pins and remove end cap.

NOTE: To reattach end cap, reverse Step 3.

